neverdark

Thermobox Room Divider Standard Installation (TRD)

for fireplaces Automatic, Firetec Installation instructions

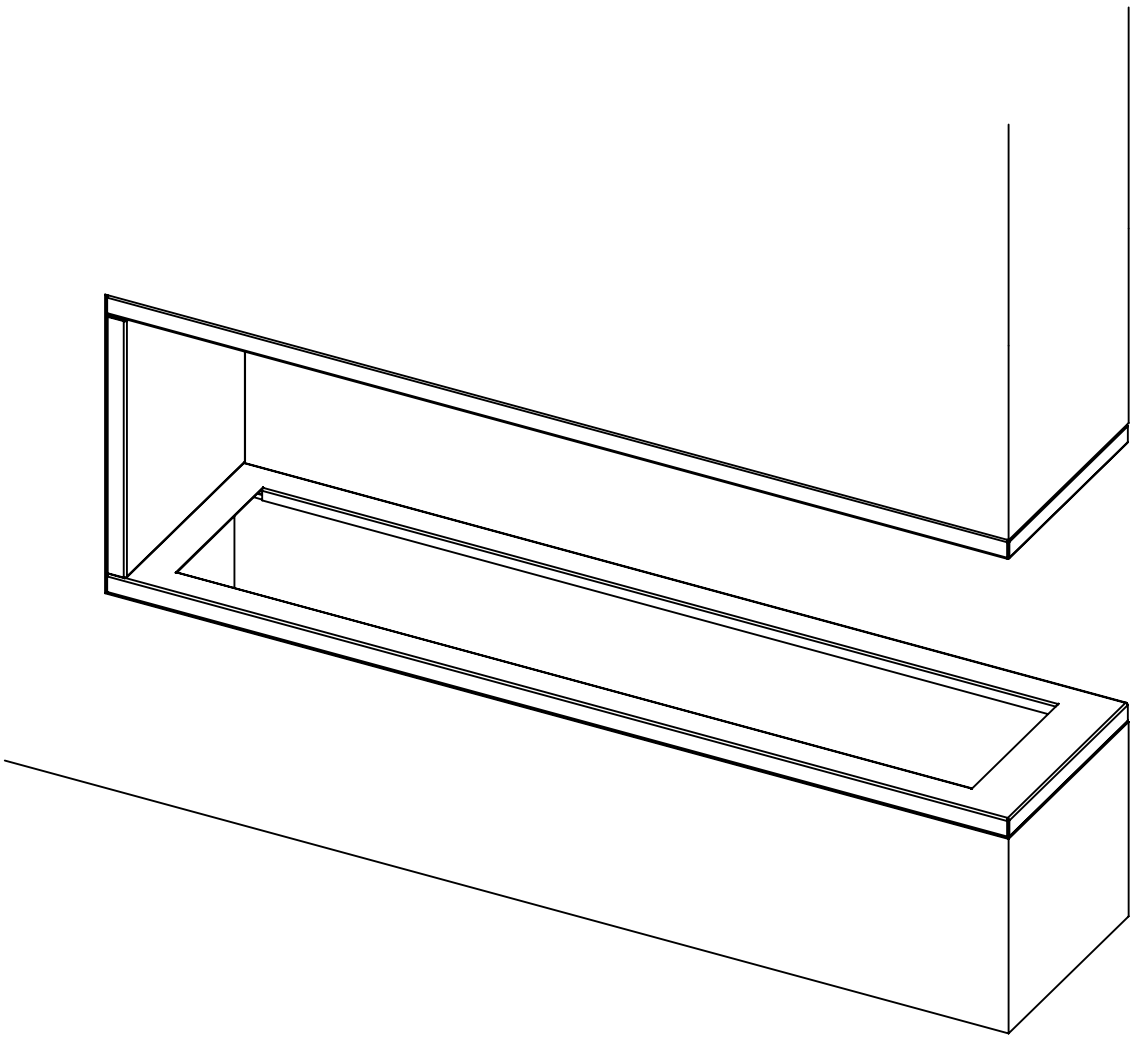

Main view

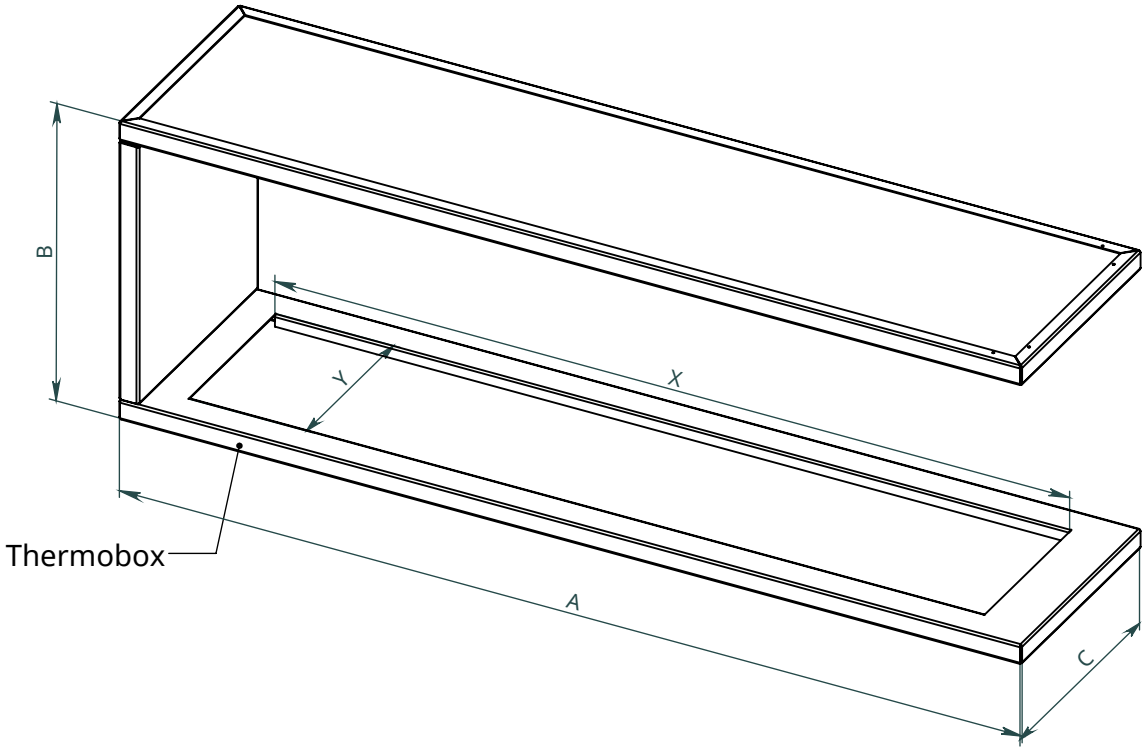

Thermobox				Fireplace	
	A	B	C	X	Y
Model	Length of the thermobox	Height of the thermobox	Depth of the thermobox	Burner length	Width of the fireplace
TRD-800	800	460	340	700	250
TRD-900	900			800	
TRD-1100	1100			1000	
TRD-1300	1300			1200	
TRD-1600	1600			1500	
TRD-1800	1800			1500	
TRD-2200	2200			2000	
TRD-2700	2700			2500	

Thermobox with options

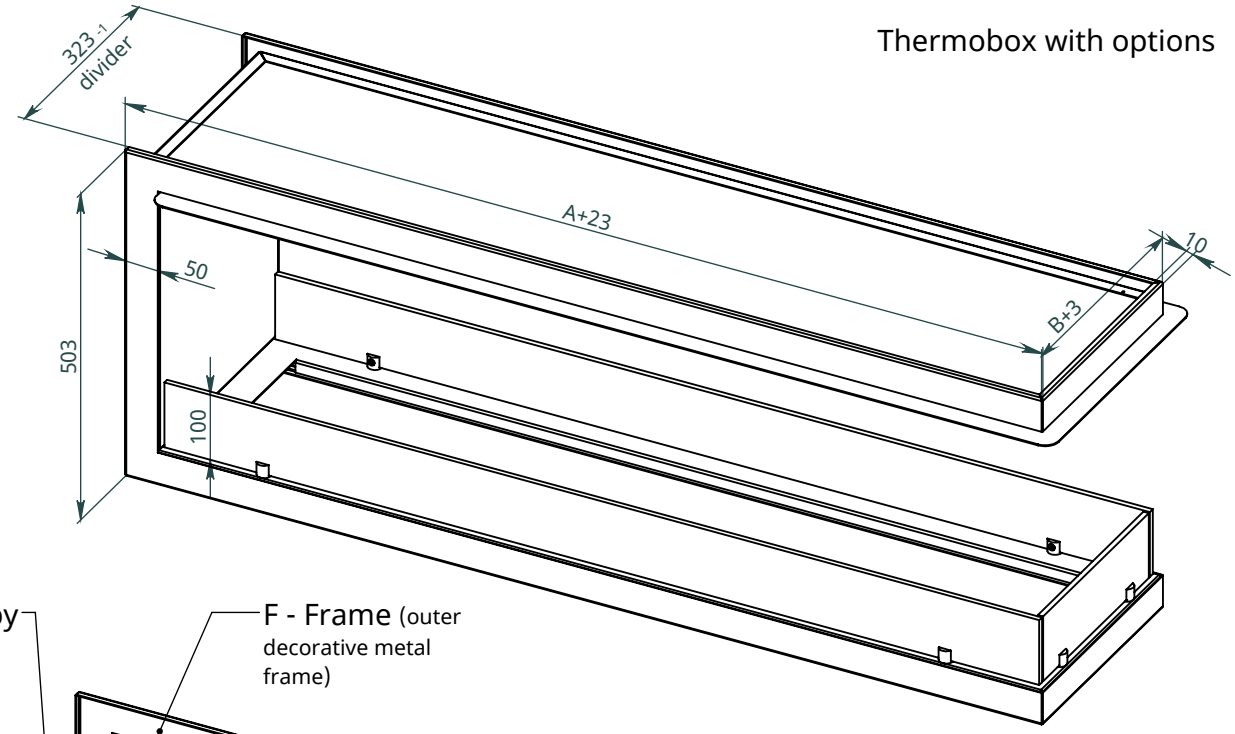

Available options:

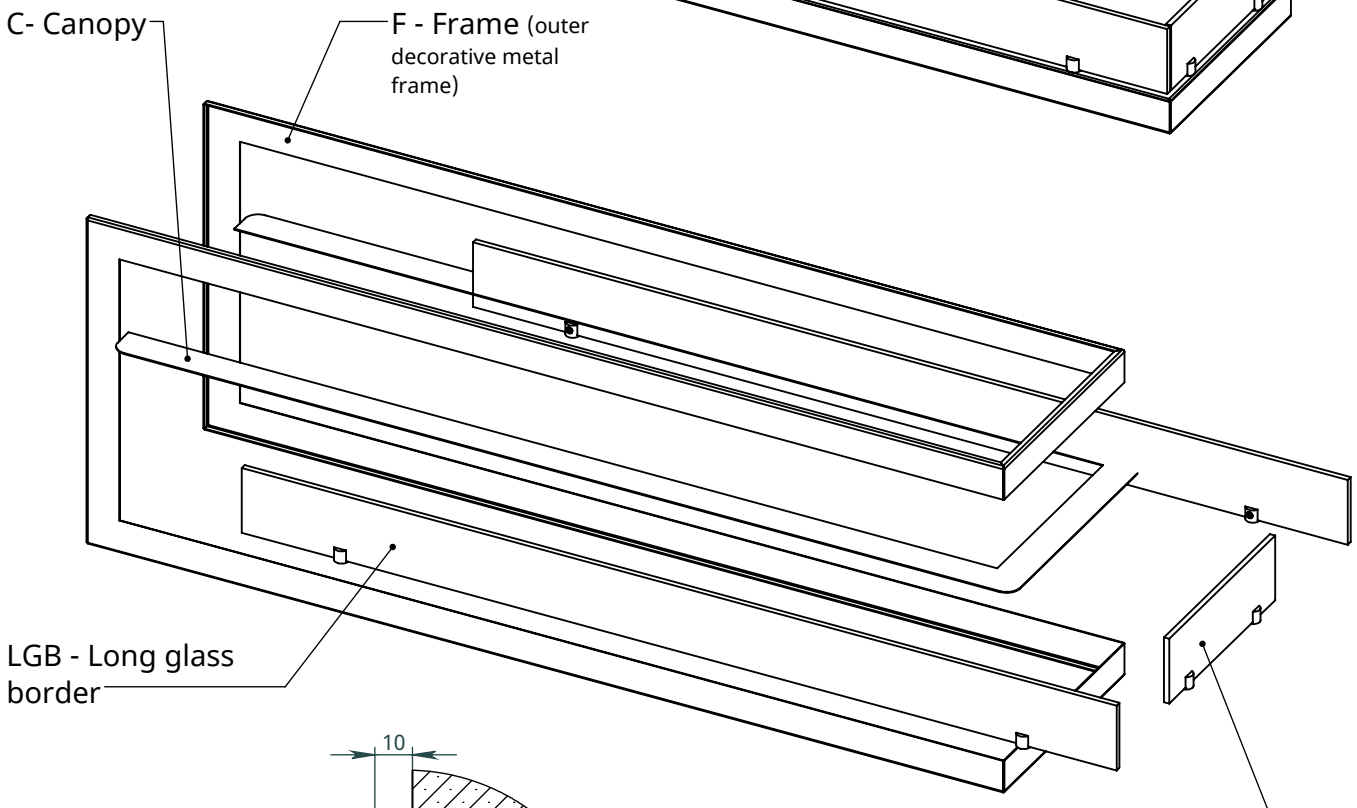

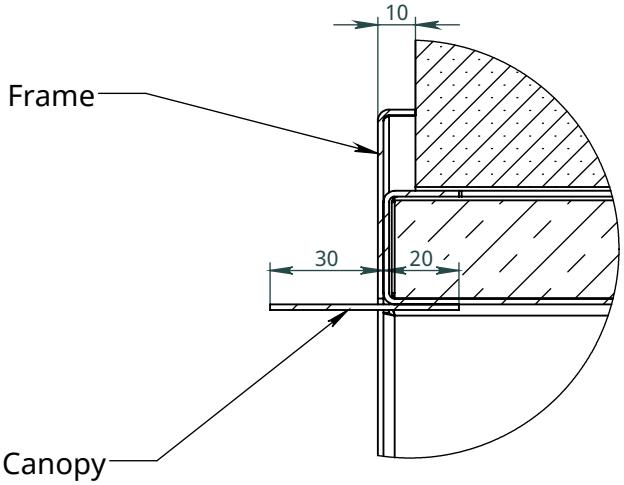

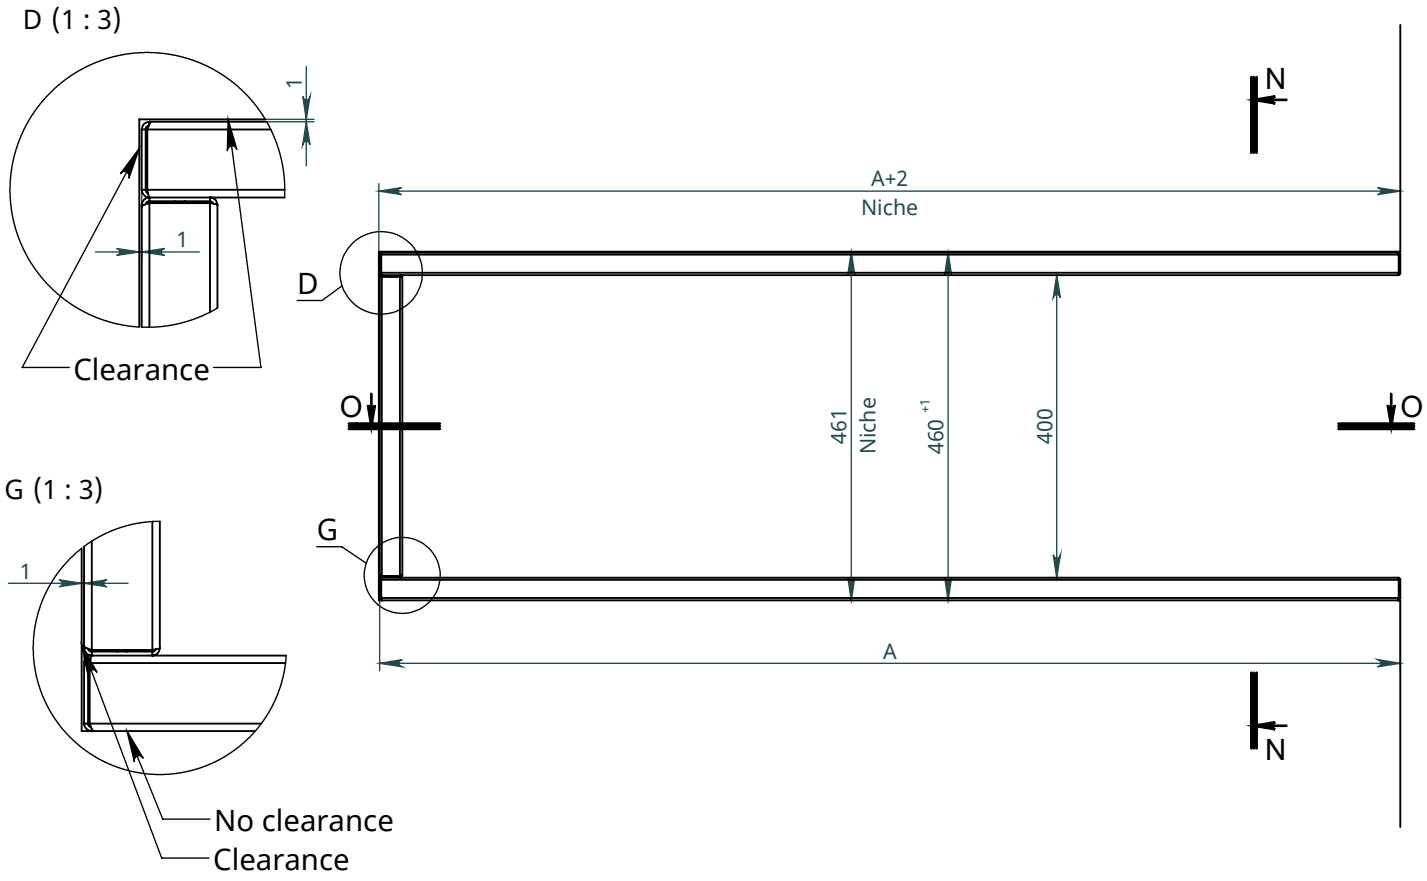
D (1 : 3)
1
1
Clearance
N
A+2
Niche
D
O
461
Niche
460 +1
400
O
G (1 : 3)
G
1
A
N
No clearance
Clearance

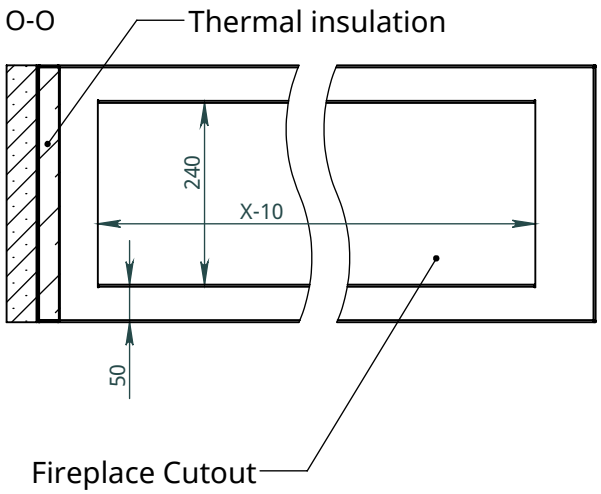
O-O
Thermal insulation
240
X-10
50
Fireplace Cutout

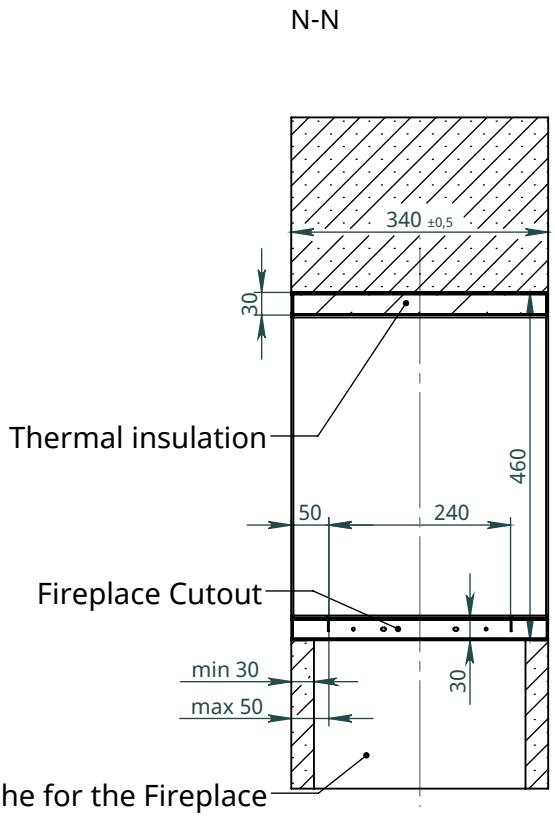
N-N
340 ±0,5
30
Thermal insulation
460
50
240
Fireplace Cutout
min 30
max 50
30
The niche for the Fireplace

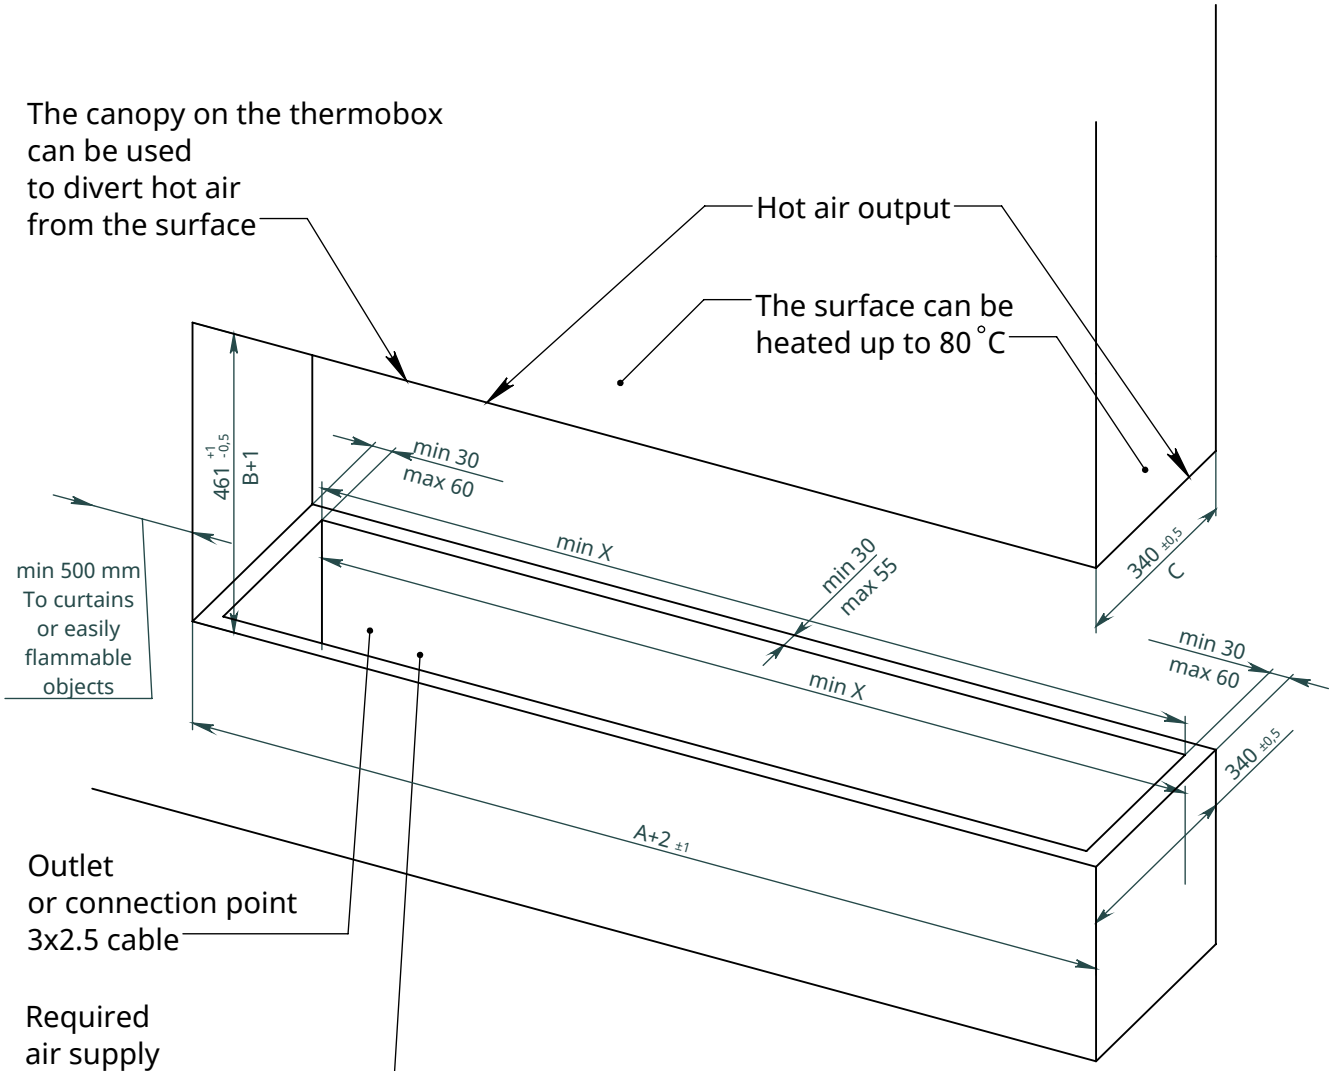
The canopy on the thermobox
can be used
to divert hot air
from the surface
Hot air output
The surface can be
heated up to 80 °C
461 +1 -0,5
B+1
min 30
max 60
min X
min 30
max 55
340 ±0,5
C
min 500 mm
To curtains
or easily
flammable
objects
min 30
max 60
min X
340 ±0,5
A+2 ±1
Outlet
or connection point
3x2.5 cable
Required
air supply
into the fireplace niche
at least 100 cm²

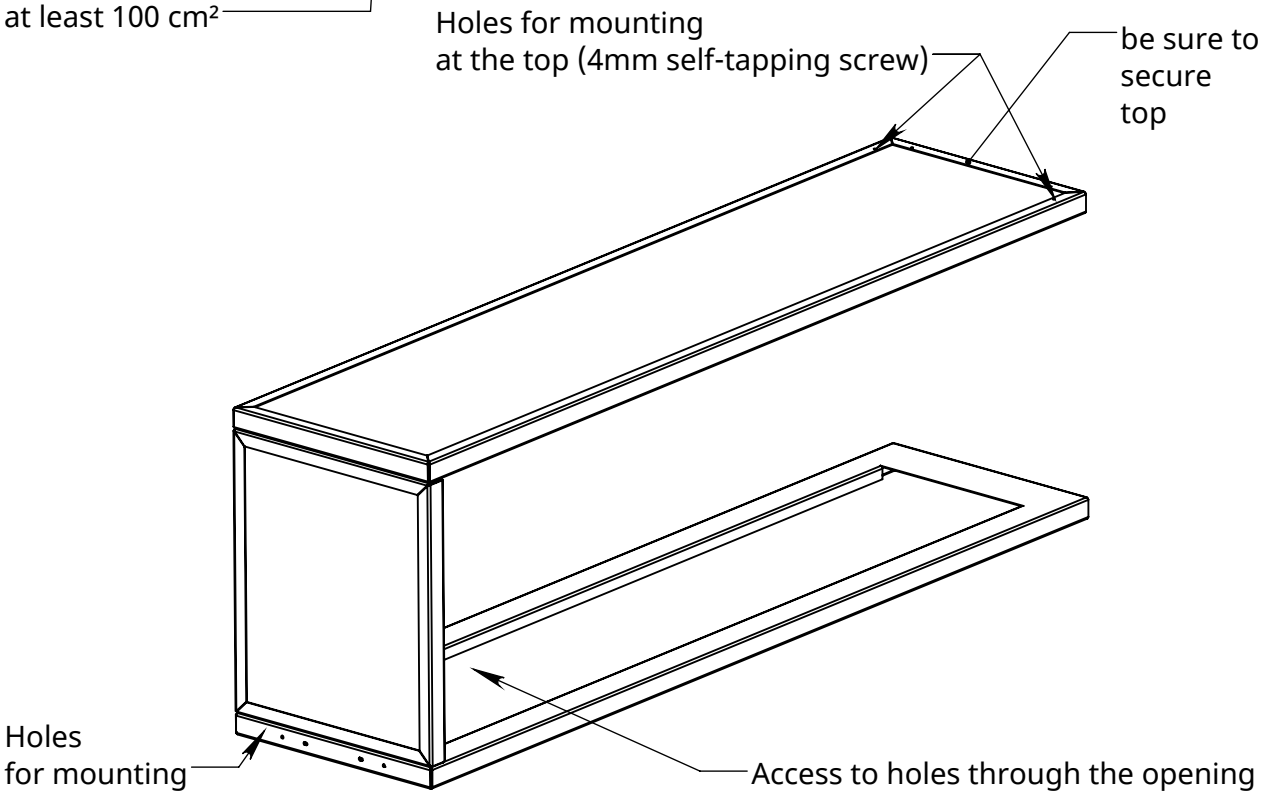
Holes for mounting
at the top (4mm self-tapping screw)
be sure to
secure
top
Holes
for mounting
Access to holes through the opening